




# Sleeve Installation Guide

## Back Pro Smart Wrap

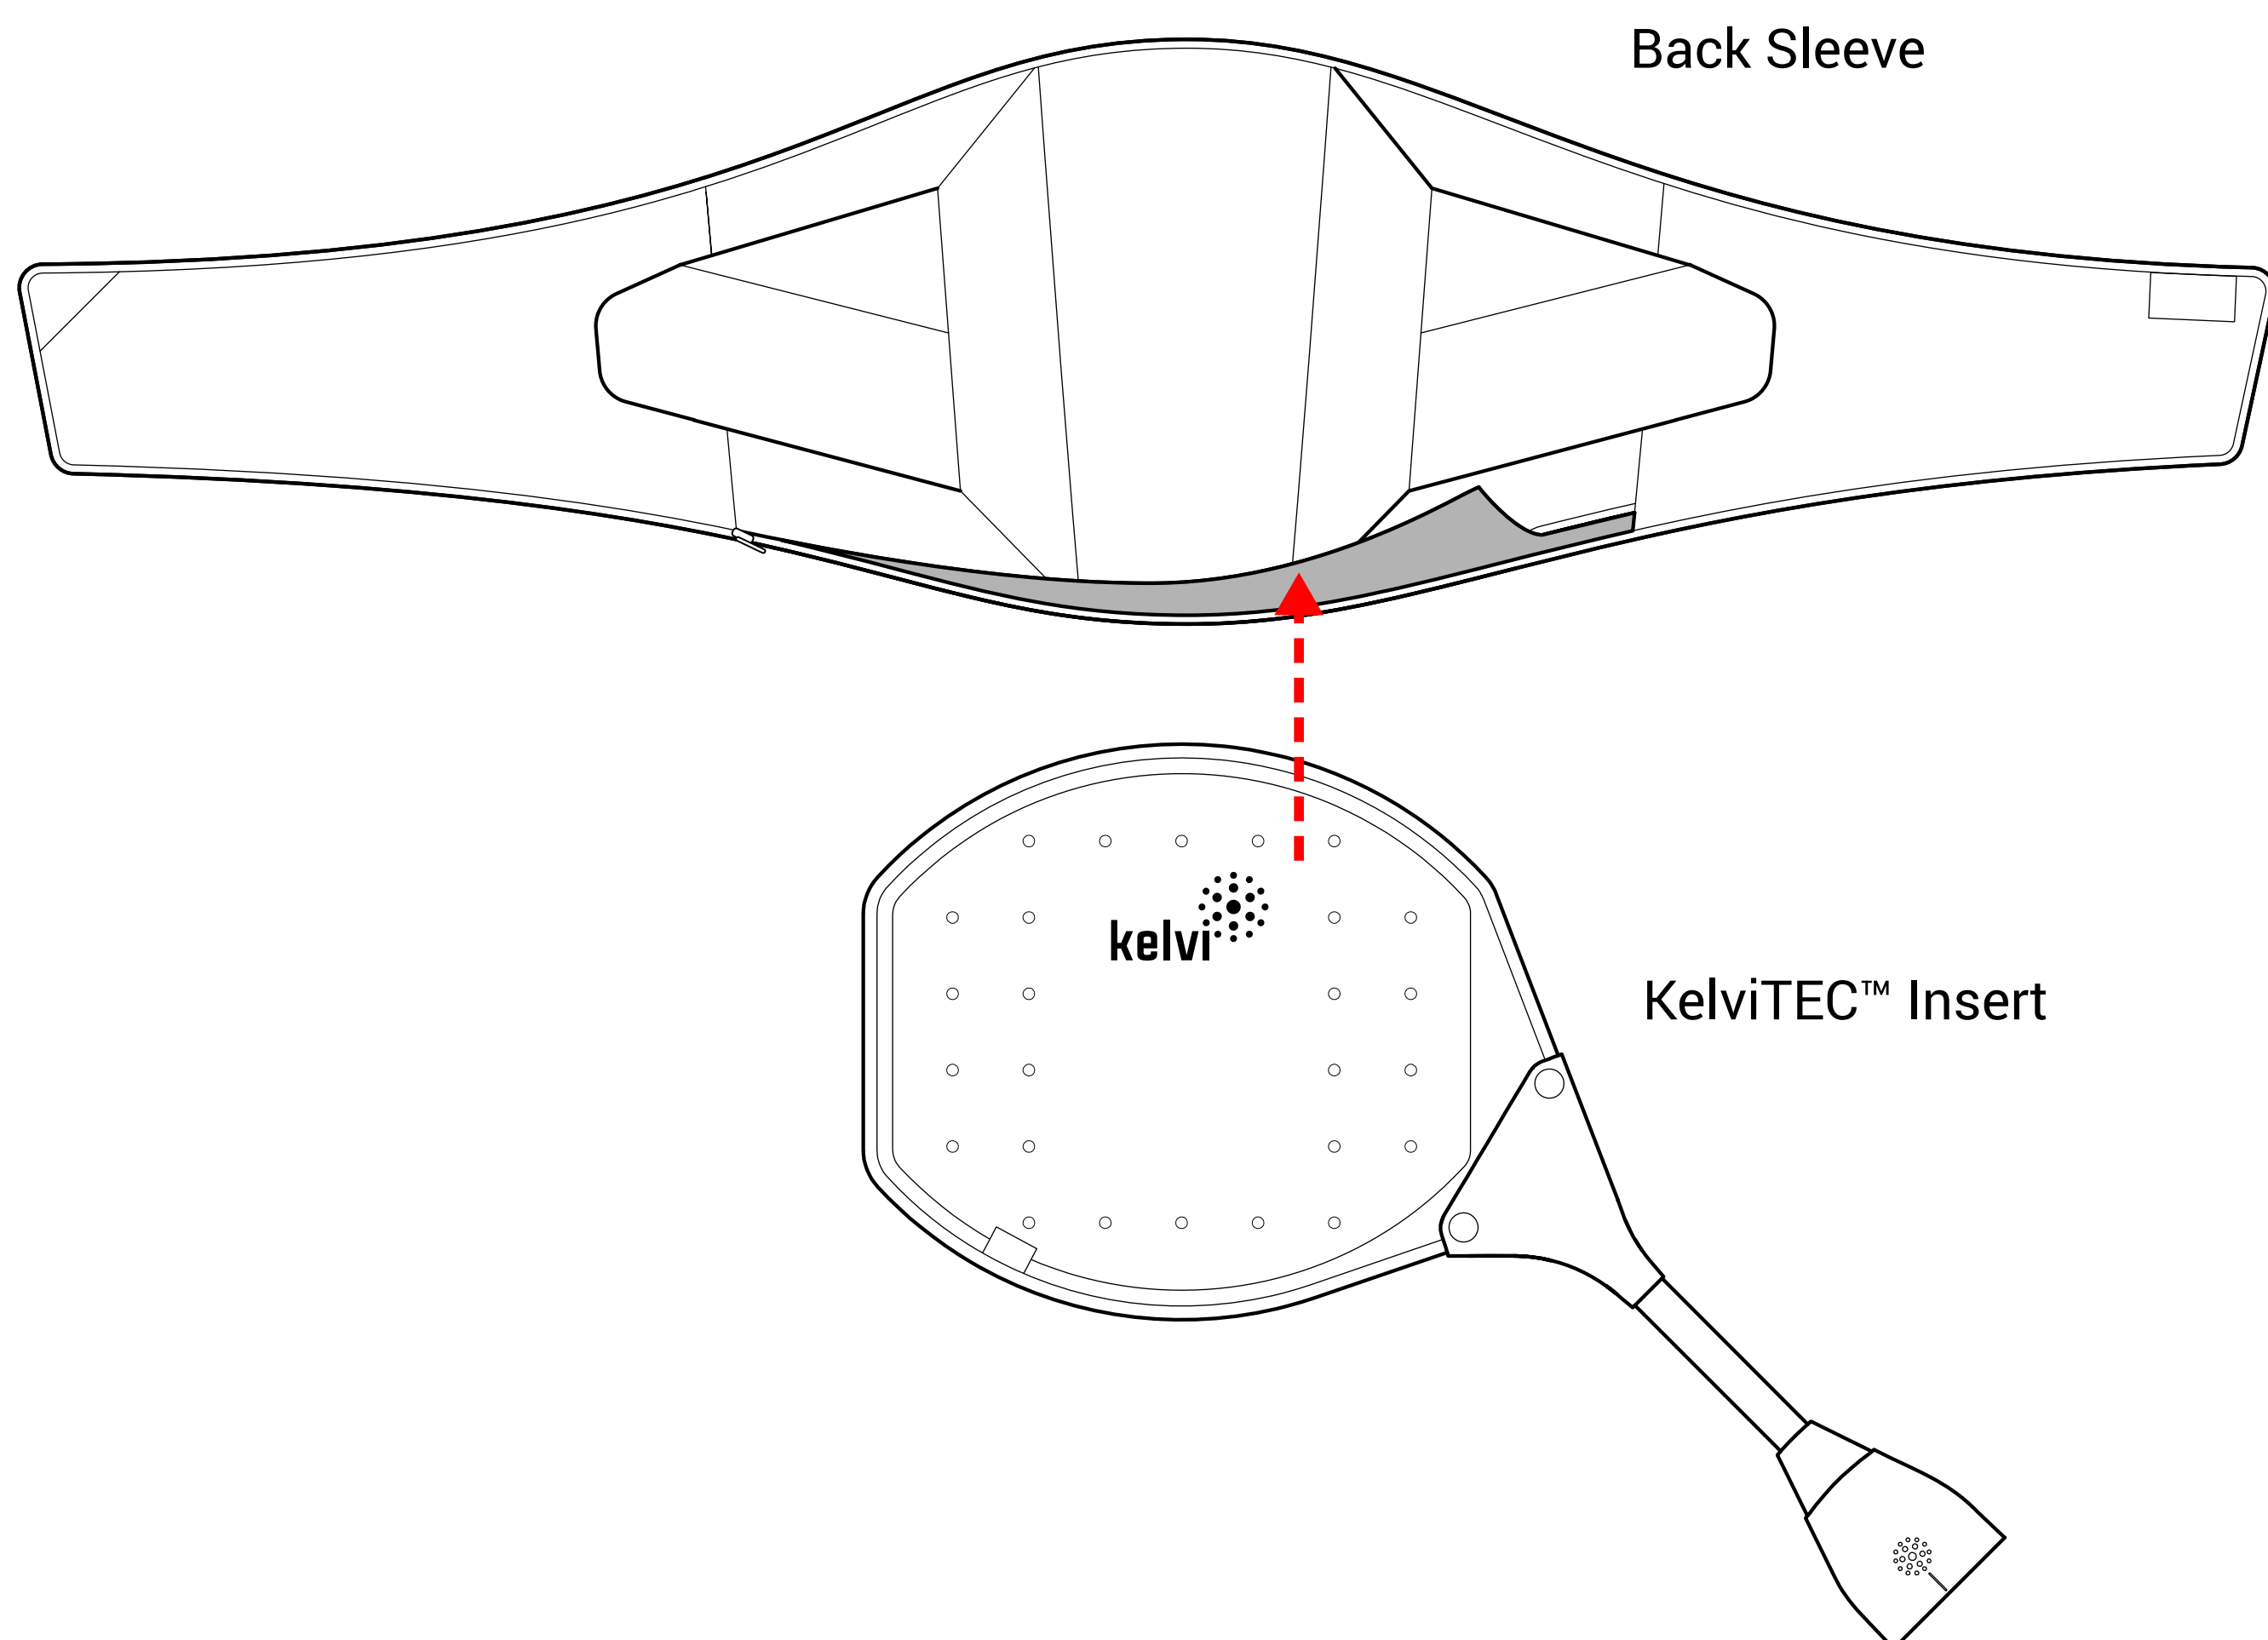

1. Place the Back Sleeve on a flat surface and open the zipper.
2. Insert the KelviTEC Insert™ into the sleeve with the metal tiles facing down, away from the Velcro side.
3. Ensure the KelviTEC Insert™ is fully inserted and close the zipper.