




Sleeve Installation Guide

Knee Pro Smart Wrap

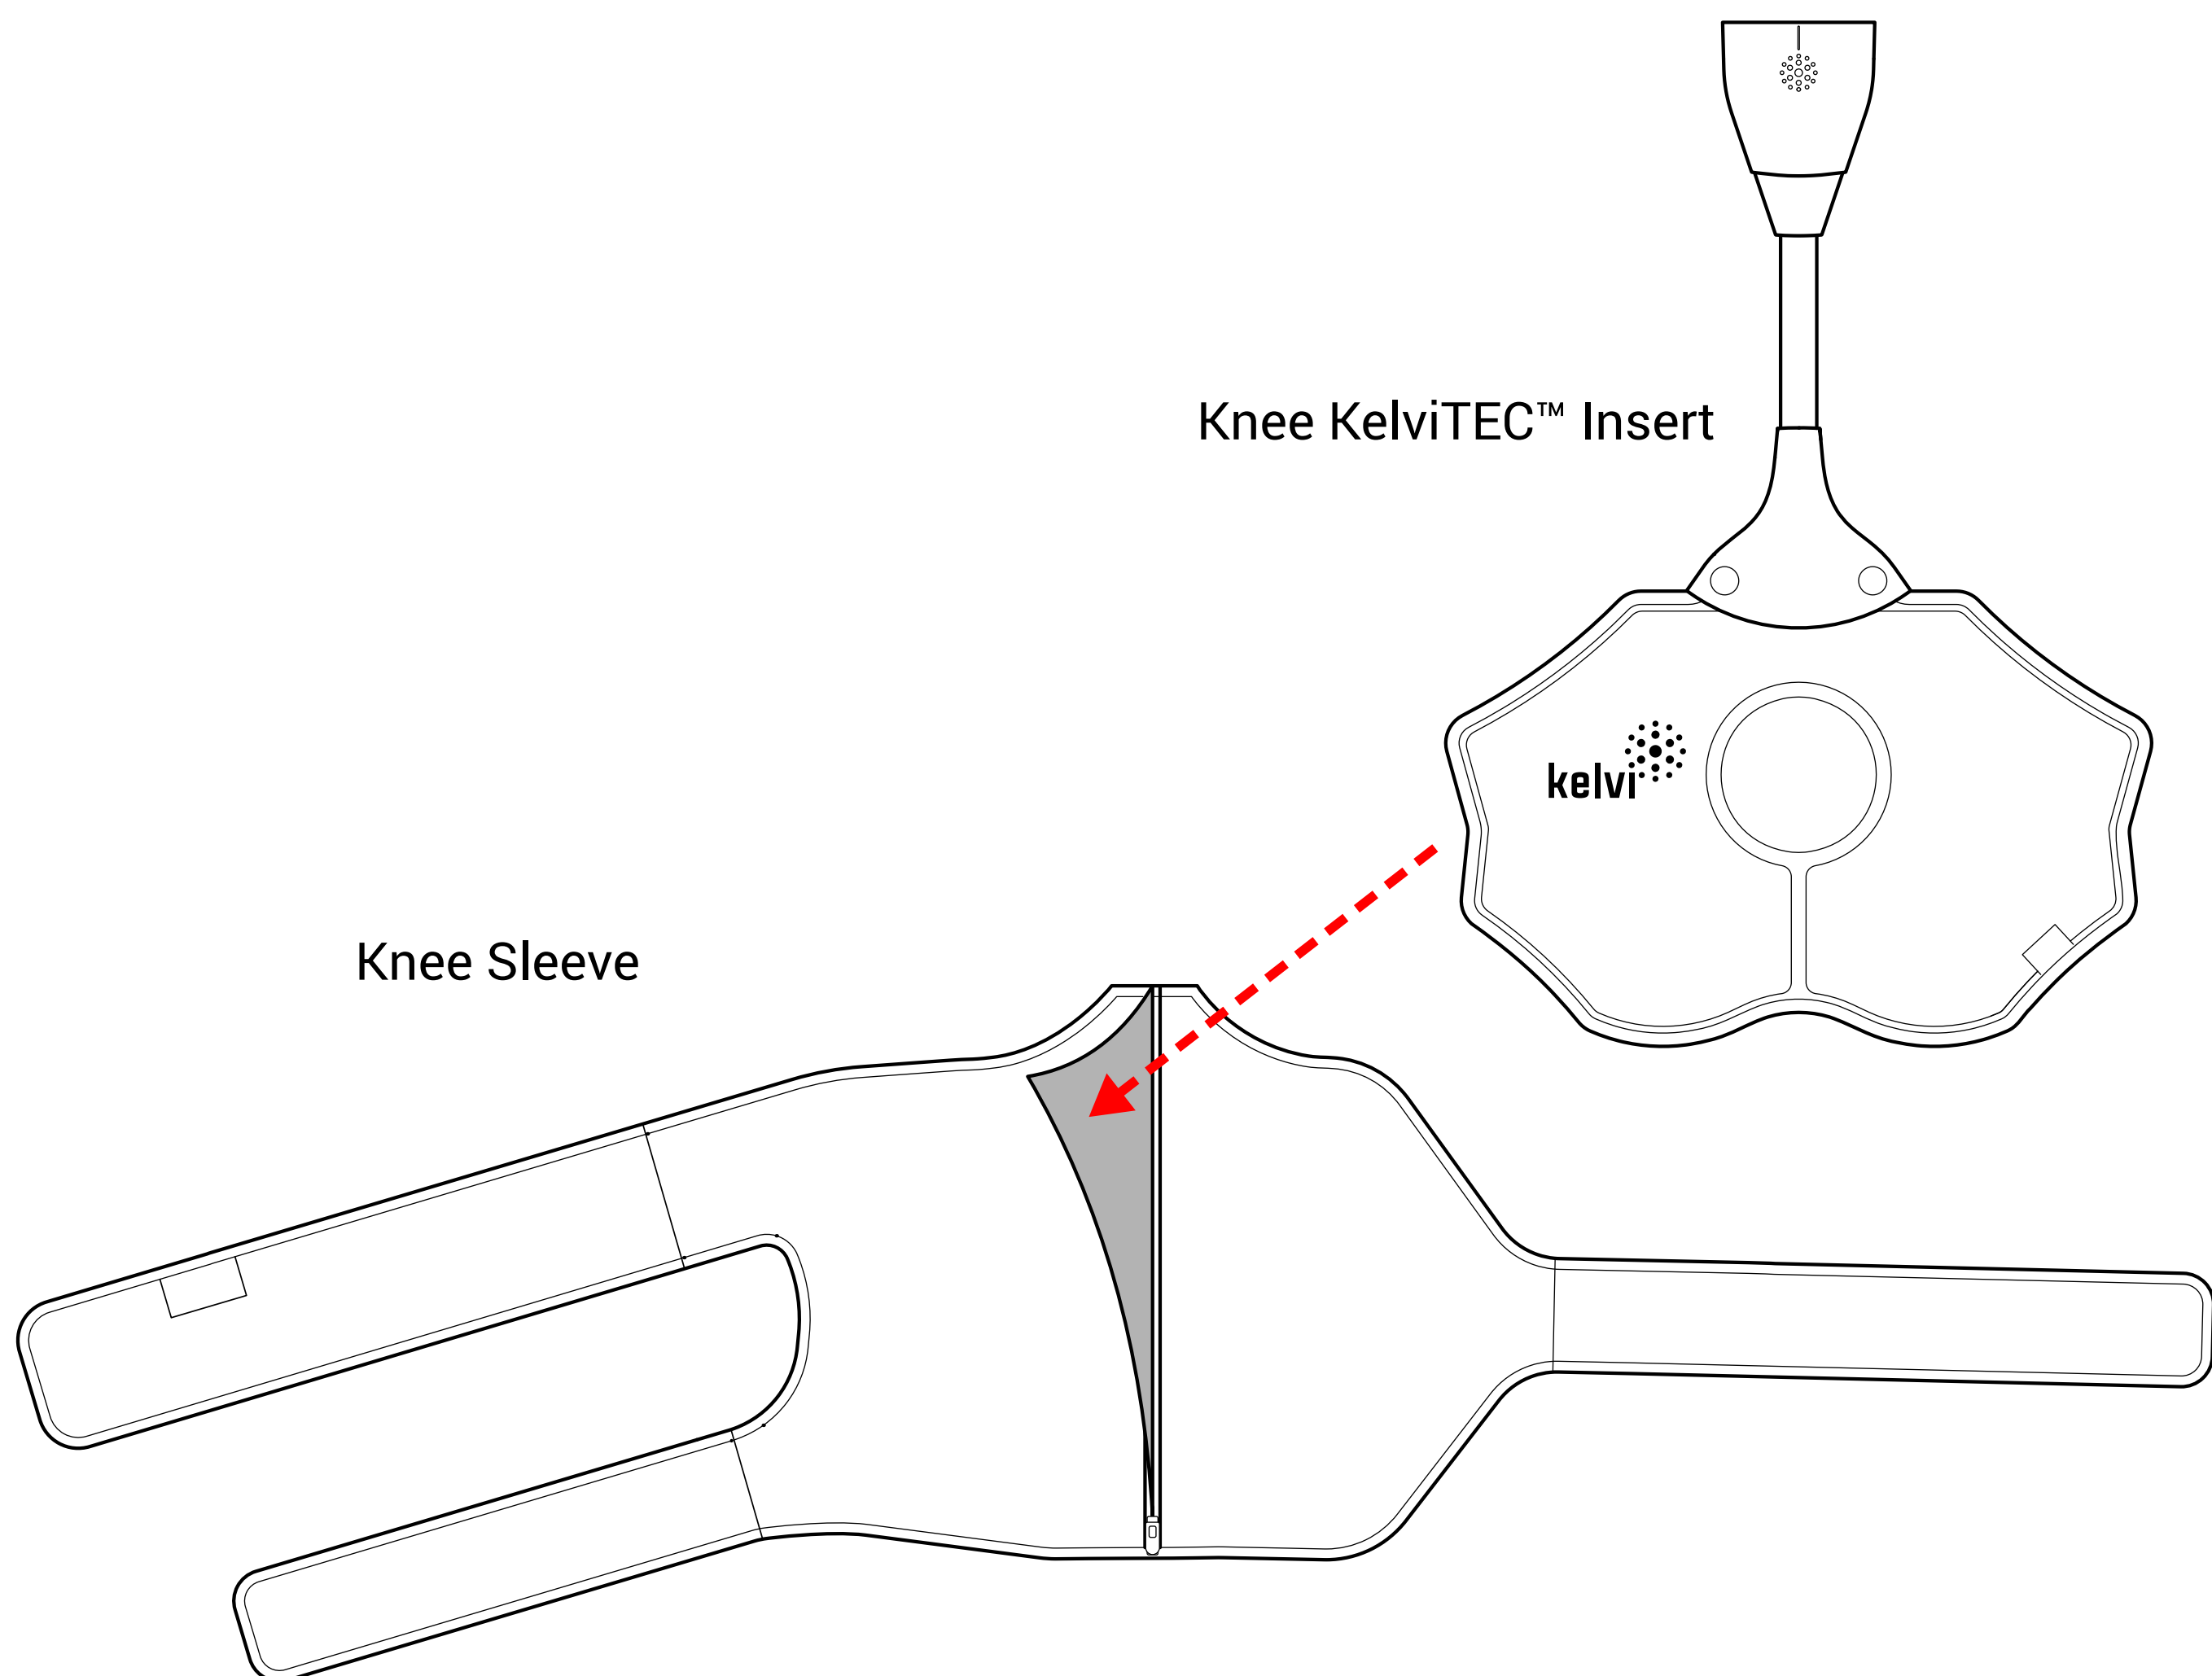

1. Place the Knee Sleeve on a flat surface and open the central zipper.
2. Insert the KelviTEC Insert™ into the sleeve with the metal tiles facing down, away from the zipper.
3. Ensure the KelviTEC Insert™ is fully inserted and close the zipper.